Steel Line Stopper Set

9AF204

- Use to prevent fluid leaks and contamination
- Spring loaded design for stopping the flow of fuel / brake fluid of car pipe
- Capacity: Banjo, 5/16"(8mm), 3/8"(9.5mm), and 1/2"(12.7mm)

156 🕏 🛱 24 / 48











Fuel Gauge & Pump Sender Collar Wrench

9AG11

- Use for removing and fitting fuel gauge sender collars to avoid damage
- 3 jaws to ensure high torque and no risk to damage plastic collar
- Use with 19mm wrench or socket
- Suitable for most collars from 89 to 170mm



KT NO.	Ø mm	₽ĸĠŢ	\$/ \$
9AG11	89~170	1.05	1 / 12

9AG12

- Use for removing and fitting fuel gauge sender collars to avoid damage
- 4 pins to ensure high torque and no risk to damage plastic collar
- Suitable for BMW F01/F02/F25, X3 etc...



Adjustable Fuel Tank Lid Remover

9AG13

- Use for removing and fitting fuel gauge sender collars to avoid damage
- Special jaws design, no risk to damage plastic collar
- Use with 3/8" DR.
- Suitable for collars from 122 ~ 199mm





