


## Straight Hose Clamp Pliers

### 9AA11

- Use to remove and install spring clamp
- Swivel V-shaped jaws
- Suitable for universal cars, especially VW, Audi, Opel, Honda, Ford

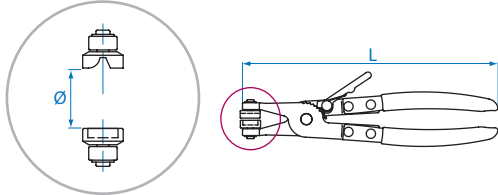


KT NO.	ø mm	inch	L mm	g	kg
9AA11	55	8-21/32	220	220	12 / 72

## Flat Band Hose Clamp Pliers

### 9AA16

- Use to remove and install spring clamp
- Swivel concave jaws
- Suitable for universal cars, especially VW, Audi, Opel, Honda, Ford

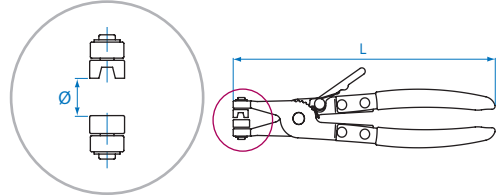


KT NO.	ø mm	inch	L mm	g	kg
9AA16	60	8-21/32	220	213	12 / 72

## Wire Hose Clamp Pliers

### 9AA13

- Use to remove and install wire clamp
- Swivel jaws
- Suitable for universal cars, especially Corbin heater hose

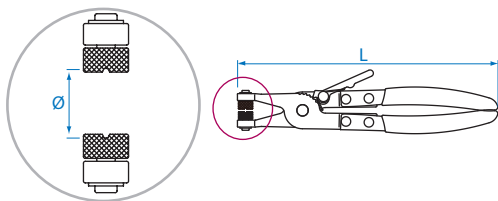


KT NO.	ø mm	inch	L mm	g	kg
9AA13	51	8-21/32	220	238	12 / 72

## Curved Hose Clamp Pliers

### 9AA21

- Use to remove and install spring clamp
- 45° swivel concave jaw with greater access in confined spaces
- Suitable for universal cars, especially VW, Audi, Opel, Honda, Ford

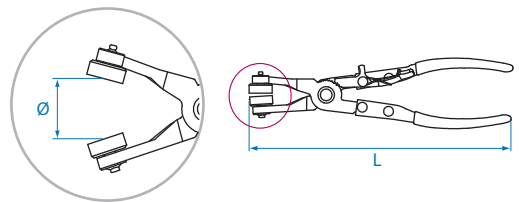

KT NO.	ø mm	inch	L mm	g	kg
9AA21	53	8-21/32	220	224	12 / 48

